


# CROWN

HOT PLATE (INFRARED COOKER) IC-195




## User manual

<http://www.jksns.ae/>

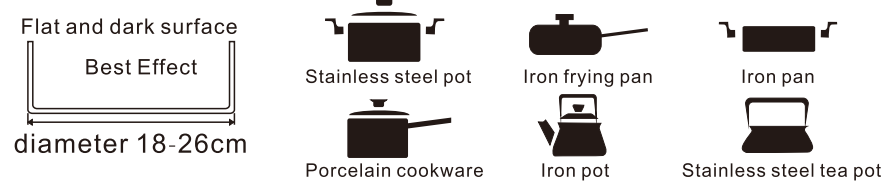

### Use Key operation

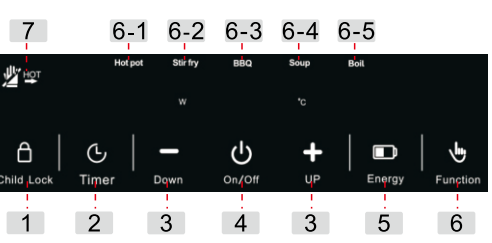

- Child Lock:** In Working state, touch this button, the functions button without working except "child Lock". Click "child lock" Button with 2 seconds again, it enters working state again.
- Timer:** In working state, touch this button to change the timer. You can timer by touch the key of "+", "-", "0". When you touch this button such as "+", "-", "0" for a long time, it adjust with 1 minutes from "00:00" to "0:35". Automatic function can not timer such as "Soup" and "Water". If you don't set the timer, this appliance works 2 hours without any else control and turn off automatically except soup and water function.
- Power and Temperature:** In working state, touch this button can be directly adjusted the heating power and temperature and cooking timer. And there are 8 levels for your adjust in by touch the key of "+", "-", "0".
- On/off:** Touch this button. The appliance is standby position. Which can perform other function by touching the key of "Function". Touch this button again to turn off the appliance.
- Energy:** It shows you the consumption of electricity you use.

### Function

**6.1 Hot pot:** when the appliance in standby position. Touch the key of "function" to choose "hot pot" it will enter to the function "hot pot" and the indicator light of "hot pot" and power will light. Which means the function of cook will unseat is display with 2000W. During use this function according to requirement. There are 8 levels for your adjust of firepower by touch the key of "+", "-", "0". with the cooking function requirement, you also adjust timer by touch the key of "+", "-", "0" or "-", "+".

**6.2 Fired:** Fired: when the appliance in standby position. Touch the key of "function" to choose "Fired" it will enter to the function "Fired" and the indicator light of "Fired" and power will light. Which means the function of cook will unseat is display with 600 C. During use this function according to requirement. There are 8 levels for your adjust of temperature by touch the key of "+", "-", "0". with the cooking function requirement, you also adjust timer by touch the key of "+", "-", "0" or "-", "+".

**6.3 Grill:** when the appliance in standby position. Touch the key of "function" to choose "Grill" it will enter to the function "Grill" and the indicator light of "hot pot and power will light. Which means the function of cook will unseat is display with 2000W. 15mins later it will turn into 1500W work to 23 mins. Then turn into 80W work to 35 mins. Finally it turns into 300W working to the end.

**6.4 Soup:** when the appliance in standby position. Touch the key of "function" to choose "Soup" it will enter to the function "Soup" and the indicator light of "hot pot and power will light. Which means the function of cook will unseat is display with 2000W. 15mins later it will turn into 1500W work to 23 mins. Then turn into 80W work to 35 mins. Finally it turns into 300W working to the end.

**6.5 Water:** when the appliance in standby position. Touch the key of "function" to choose "Water" it will enter to the function "Water" and the indicator light of "hot pot and power will light. Which means the function Water of cook will unseat. It display "0:15" and 2000W. Alternately the appliance in aptitude mode for 18 minutes and turns off automatically, according to requirement you can not adjust of temperature by touche key of "+", "-", "0". with the cooking function requirement, you also adjust timer by touch the key of "+", "-", "0".

**High temperature indicator light:** It will light when the surface temperature of appliances if more then 80 C and it will turn off when the temperature is less then 80OC. When the appliance is on other working state. You can touch "Function" till to choose which function you would like to.

Name of product: infrared hotplate  
Model No.: IC-195/IC-196/IC-197/IC-198  
Voltage: AC 220-240V  
Wattage: 2000W  
Weight: 2.3KG  
Size: 280\*280\*70

### Trouble shooting

If there is something wrong with the infrared hotplate, please check as follows before sending to repair.

Please read this manual carefully before using, in order to take full advantage of its reference, if you found some problems. Please contact your local dealer.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
- WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - by bed and breakfast type environments.

National store L.L.C.  
P.O Box 284 Dubai, UAE.

Made in china.

1

### FEATURES

The electric range is new products which using infrared cheating electric stove. It is particularly

Appropriate the needs of modern cooking for the family, mainly has the following advantage:

- New technology, for infrared heating: heat transfer using heating heat transfer using infrared light waves. On electromagnetic radiation heating effect.
- All types of cookware can be used such as iron, aluminum, copper, ceramic, heat resistant glass, heat resistant materials, equipment, etc. And meet the steaming, boiling, fried, BBQ, hot pot with different cooking methods.
- Environmental protection: No shoot, no flame, no exhausted gas of cooking is safer hygiene.
- Microcomputer control, fire temperature is automatically adjusted easy to operate.
- Ceramic glass with superior hardness, easy to clean, durable.

### Picture structure:



### COOKWARE CHOICES

Any pot could be used. Such as iron, aluminum, Copper ceramics. Heat resistant glass and any heat resistant utensils. The infrared hotplate makes use of the far infrared to heat the food so please choose the best cookware to make it more effective. We suggest choosing flat-bottomed pan as below:

2

Malfuction	disposal
After plugging in there is no warning sound and the indicator light of "on/off" does not glow	1. check whether the plug disquamate with supply socket 2. Check for the power supply witch or the fuse open circuit 3. Check for power failure
E1	Supply voltage is too low
E2	Supply voltage is too high
E3	Furnace surface sensor-short circuit
E4	SCR sensor short circuit
E5	Temperature is too high
E6	SCR sensor temperature is too high
E7	Fan failure

### After sale service

In order to get the best service for you, please note the below:

- The electric range warranty is for one year based on invoice and guarantee repair list, if the defction caused by inappropriate uses of customer, repair fee will be charged.
- During warranty period please do not disassemble the appliance case. Please contact seller or the local special repair department.

# كراون

صليحة ساخنة (بالطاقة تحت الحمراء) IC-195



موديل IC-195

الوظائف التشغيلي: 220 - 240 فولت

## دليل الإستخدام

شكراً لاستخدامكم هذا الجهاز الذي الرابع من كراون آين . يرجى قراءة دليل التعليمات بعناية للتأكد من التليم بشكل قد يملك الضمان الخاص بجهازكم ويعرض حياتكم للخطر.

### تحذير

- قراءة دليل المستخدم بعناية قبل البدء باستخدام هذا الجهاز وخطفه في مكان مناسب الرجوع إليه عند الحاجة.
- التأكد من الوصلة التشغيلي المشد الآله على الجهاز يتوافق مع الوصلة الكهربائي للبلد التي الكهربائية، إن لم يكن الرجاء عدم استخدام الجهاز والالتصاق بالموارد.
- يُمنع لمس الكهربائي بعيداً عن الأسلاك الباردة في المرات الحادة، كي لا تتسبب.
- عدم استخدام ألوان حادة في تنظيف الجهاز لأن ذلك سيؤذي على سطح الزجاج.
- يجب وضع الجهاز على سطح مستو وبشكل آفقي بعيداً عن مشاغل الأطفال والتأكد من وجود مسافة خالية لا تقل عن 10 سم حوالي الجهاز لأن حرارة الجهاز مرتفعة.
- لا تتعرض الجهاز في الماء أو أن تشغله تحت المشور تجنب خطر حروق منبهة كهربائية.
- في حال تشغيل الجهاز فإن درجة حرارة سطح الجهاز تستعمل إلى مستوى عال إذا يجب الحذر وعدم لمس يديك، واستخدام قفازات القطن عند مساعدة الأهل أو مساعدة الأطفال.
- عدم السماح للأطفال بالإفراط من الجهاز. كما أنه يجب مراقبتهم كي لا يلعبوا بالجهاز.
- لا تدع السطح الكهربائي يلامس على حالة الفلتر أو أي سطح يترسب عليه الجهاز.
- لا تدع شعيرات الجهاز أثناء تشغيله أو عندما يكون ساخناً بعد الانتهاء من استخدامه.
- لا تدع بالأحماض فوق الجهاز أثناء تشغيله.
- التأكد من أن أوعية الطبخ أو الأبريق غير حادة من الفايبر أثناء تشغيل الجهاز.
- يجب عدم لمس سطح الجهاز عندما تكون أوعية الفلتر حادة.
- لا تستخدم الجهاز إذا لم تكن متأكد من سلامة الجهاز.
- لا تدع شعيرات الجهاز أثناء تشغيله أو الأبريق غير حادة من الفايبر أثناء تشغيل الجهاز.
- يجب عدم استخدام الجهاز في حالات الطقس الحار جداً، ولا تستخدمه في المناطق التي يكون فيها الكثير من الغبار.
- بعد تنظيف الجهاز يجب فصله تماماً عن التيار الكهربائي والتأكد حتى يبرد تماماً لا لمس السطح الكهربائي إذا كنت تشعر راحة أو ملل.
- لا تستخدم الجهاز إذا كان سطحه دافئاً أو عندما تكون أحد مكوناته دافئة أو بعد تشغيل الجهاز في شكل من الأشكال.
- في حالة الإفراط في استهلاك وإي استهلاك وفي حال فقد السطح الكهربائي، يجب استبداله من قبل الشركة المصنعة أو وكيل خدماتها من أجل تجنب حدوث أي مشاغل أو الحوادث الكهربائية.
- لا تستخدم الجهاز من قبل الأطفال (بمن فيهم الأطفال) مع الغطاء القدرات المائية والحسية أو الطهي، أو عدم وجود الخبرة والعرفه، ما لم تكن قد اعتيقت لهم تعليمات بشأن استخدام الأجهزة من قبل الشخص المسؤول.
- هذا الجهاز لا تستخدمه في المناطق التي يكون فيها الكثير من الغبار.
- يجب عدم استخدام الجهاز من خلال جهاز توقيت خارجي أو نظام متصل لتتأكد من بعد.
- إذا كان السطح العلوي للجهاز ممتدعاً، يجب إيقاف تشغيل الجهاز مباشرة وأثناء حدوث منبهة منبهة كهربائية.

### مميزات الجهاز

- المميزات الكهربائية التي تشغله الأمانة تحت الحمراء التي تشغله من الأجهزة الحديثة. وهذه الأجهزة مبنية لإنتاجات البيع الحديثة للأفراد على وجه الخصوص، ولها المميزات الرعة التالية:
- استخدام الكهرباء في الطاقة الأمانة تحت الحمراء، يتم بت موجات الأمانة تحت الحمراء التي الحرارة داخل جسم الفرد، تأثير الاستماع والكهربائية.
- يمكن استخدام جميع أنواع أوعية الطبخ المستوعبة من الحديد والألومنيوم والناحس وسراميك. الإزاحة الرخوة المقومة للحرارة، أو أي مواد مقاومة للحرارة، الحماجات، اليه والاستخدام الطهي والخبز والتدخين وبكافة أنواع الأواني المنزلية.
- حماية بيئية لا تشتمل، لا يجب لا استنفاد الغاز السام معاً بجملة أكثر أمناً وبأقل.
- عدم التلوث والجهاز عن طريقة ترقية كيميائية يتم تعديل درجة حرارة الأمانة تلقائياً وبسهولة تامة.
- السطح مستوعب من الزجاج مزودة بشفرة، سهل التنظيف، إنز تعديل عالي.

### صورة الجهاز وإبعاده




### خيارات الطبخ:

يمكن استخدام أي وعاء للطبخ مثل الحديد والألومنيوم والناحس والسراميك، والبرامق المقاومة للحرارة، أو أي مواد مقاومة للحرارة. إن سطح الأمانة تحت الحمراء يحتاج من استخدام الأمانة تحت الحمراء الجيدة لتتضمن الطعام كما يرجى اختيار أفضل أنواع الأوعية الجيدة أكثر فعالية. يلزم اختيار أوعية ذات باع مسطح على السطح العلوي.



### مميزات التشغيل:

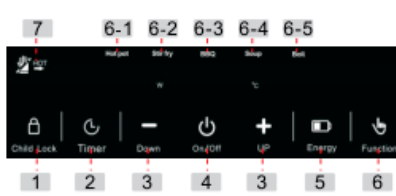

1

2

### استكشاف الأخطاء وإصلاحها

في حال توقف الجهاز عن العمل، يرجى مراجعة الجدول التالي قبل إرساله إلى الوكيل للإصلاح.

الخطوة المقترحة	المشكلة
1. تحقق من دخول التيار في الموصل الكهربائي بشكل صحيح.	عدم توصيل الجهاز للكهرباء أو عدم إمداد طاقة
2. تحقق من عدم وجود قطع في أسلاك أو توصيل التوصيل الرئيسية.	"تشغيل الجهاز"
3. تحقق من عدم تلف السطح الكهربائي الرئيسية.	E1
4. التردد التشغيلي الرئيسي منخفض جداً.	E2
5. التردد التشغيلي الرئيسي عال جداً.	E3
6. يوجد على الجهاز ترسبات من الطعام.	E4
7. يوجد على الجهاز ترسبات من الطعام.	E5
8. الحرارة أعلى من الحد المسموح.	E6
9. الحرارة أعلى من الحد المسموح.	E7

### المواصفات الفنية:

رقم الموديل	IC 195
الوزن التشغيلي	220 - 240 كغ
الاستطاعة	2000 واط
الارتفاع	2.3 كغ
أبعاد الجهاز	280 x 280 x 70 سم

### معالجة التخلص من الجهاز:



هذا الرمز يعني التخلص من الأجهزة الكهربائية في حاوية تفويت مخصصة غير مصممة لاستخدام مرافق جمعيات متخصصة. اتصال بالجهات الحكومية المحلية (البلديات) للحصول على معلومات بشأن التخلص من هذا النوع من الأجهزة. إذا لم التخلص من الأجهزة الكهربائية في سلال القمامات أو القمامة، يمكن أن تتسرب المواد الخطرة إلى المياه الجوفية ويهدد في المسئلة المائية والحق الأضرار في الصحة العامة.

4

- قبل تشغيل الجهاز:** هذا الزر المثلثة لون (أحمر، أصفر، أخضر) بعد تصفئة كافة وظائف الجهاز بمشائه "قبل التشغيل" ثم يضغط مرة أخرى لمدة 2 ثانية يعمود الجهاز تلقائياً الأمر مرة أخرى.
- الوقت يستهلك من هذا الزر:** التغيير الوقت يمكنك التحكم بالوقت عن طريق لمس مفتاح "+", "-", "0". عند لمس الأزرار "+", "-", "0" لفترة طويلة، فانه سيتم ضبط الوقت بواقع 10 دقائق لكل ضغط من "00:00" إلى "3:59". عند لمس الأزرار "+", "-", "0" بشكل خفيف، فانه سيتم ضبط الوقت بواقع 1 دقيقة لكل ضغط من "00:00" إلى "3:59".
- في حال عمل ضبط الوقت:** يعمل الجهاز لمدة 2 ساعة ثم يتوقف تلقائياً. لإجراء استخدام ضبط الوقت في حال تشغيل المياه أو التوربية.
- لمس مفتاح "+", "-", "0":** يمكن لمس هذه الأزرار لتعديل مستوى الطاقة ودرجة الحرارة والوقت الزمني. هناك 8 مستويات للتحديد حسب الرغبة عن طريق لمس مفتاح "+", "-", "0".
- التشغيل / إيقاف:** عند لمس هذا الزر يسمح للجهاز في وضع الاستعداد وبالتالي يمكن أن تبدأ باستخدام بقية الوظائف. لمس هذا الزر مرة أخرى لإيقاف تشغيل الجهاز.
- الطاقة:** سيظهر لك استهلاك الكهرباء التي استهلكها.

### الوظائف

**6.1 Hot Pot:** "Hot Pot" عندما يكون الجهاز في وضع الاستعداد، لمس زر "Function" لإختيار "Hot Pot". سيظهر مؤشر "Hot Pot" والتشغيل ويتم عرض 2000 واط. عند أداء استخدام هذه الوظيفة ووفقاً للتعليمات الخاصة بكل، هناك 8 مستويات للتحديد ببطار الطاقة والوقت عن طريق الضغط على الأزرار "+", "-", "0".

**6.2 Fired:** "Fired" عندما يكون الجهاز في وضع الاستعداد، لمس زر "Function" لإختيار "Fired". سيظهر مؤشر "Fired" والتشغيل ويتم عرض 600 C. أثناء استخدام هذه الوظيفة ووفقاً للتعليمات الخاصة بكل، هناك 8 مستويات للتحديد ببطار الطاقة والوقت عن طريق الضغط على الأزرار "+", "-", "0".

**6.3 Grill:** "Grill" عندما يكون الجهاز في وضع الاستعداد، لمس زر "Function" لإختيار "Grill". سيظهر مؤشر "Grill" والتشغيل ويتم عرض 2000 واط. أثناء استخدام هذه الوظيفة ووفقاً للتعليمات الخاصة بكل، هناك 8 مستويات للتحديد ببطار الطاقة والوقت عن طريق الضغط على الأزرار "+", "-", "0".

**6.4 Soup:** "Soup" عندما يكون الجهاز في وضع الاستعداد، لمس زر "Function" لإختيار "Soup". سيظهر مؤشر "Soup" والتشغيل ويتم عرض 2000 واط. بعد 15 دقيقة سوف تتحول إلى 1500 واط حتى 23 دقيقة، ثم تتحول إلى 800 واط حتى 35 دقيقة. وأخيراً يتحول إلى 300 واط العمل حتى النهاية.

**6.5 Water:** "Water" عندما يكون الجهاز في وضع الاستعداد، لمس مفتاح "Function" لإختيار "Water". سوف يظهر مؤشر "Water" والتشغيل ويتم عرض "0:15". بعد 15 دقيقة سيتم تحويل الماء إلى 1500 واط. أثناء تشغيل هذه الوظيفة ووفقاً للتعليمات الخاصة بكل، هناك 8 مستويات للتحديد ببطار الطاقة والوقت عن طريق الضغط على الأزرار "+", "-", "0".

**6. High Temperature:** "High Temperature" سوف يظهر هذا المؤشر عندما تكون درجة حرارة سطح الجهاز أكثر من 80 C وسوف يمتلئ عندما تكون درجة الحرارة تسخن الجهاز أقل من 80 C.

3