


CROWN

HOT PLATE (INFRARED COOKER) IC-198




User manual

<http://www.jksns.ae/>

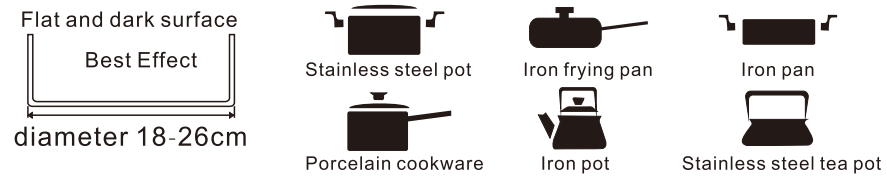

Use Key operation

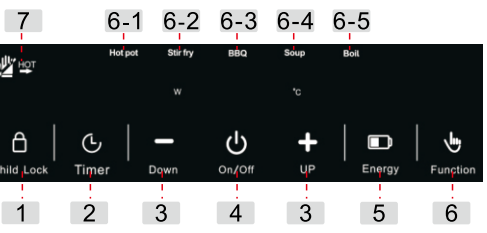

- Child Lock:** In Working state, touch this button, the functions button without working except "child Lock." Click "child lock" Button with 2 seconds again, it enters working state again.
- Timer:** In working state, touch this button to change the timer. You can timer by touch the key of "+", "-", "0". When you touch this button such as "+", "-", "0" for a longtime, it adjust with 1 minutes from "00:00" to "3:59". Slightly, when you touch this button such as "+", "-", "0", slightly, it will adjust 1 minutes from "00:00" to "3:59".
- Automatic function:** can not timer such as "Soup and Water". If you don't set the timer, this appliance works 2 hours without any else control and turn off automatically except soup and water function.
- Temperature and cooking timer:** In working state, touch this button can be directly adjusted the heating power and temperature and cooking timer. And there are 8 levels for your adjust in by touch the key of "+", "-", "0".
- On/off:** Touch this button. The appliance is standby position. Which can perform other function by touching the key of "Function". Touch this button again to turn off the appliance.
- Energy:** It shows you the consumption of electricity you use.

Function

- Hot pot:** when the appliance in standby position. Touch the key of "function" to choose "hot pot" it will enter to the function "hot pot" and the indicator light of "hot pot" and power will light. Which means the function of cook will unseat is display with 2000W. During use this function, according to requirement, there are 8 levels for your adjust of firepower by touch the key of "+", "-", "0". with the cooking function requirement, you also adjust timer by touch the key of "+", "-", "0" or "0".
- Fired:** when the appliance in standby position. Touch the key of "function" to choose "Fired" it will enter to the function "Fired" and the indicator light of "Fired" and power will light. Which means the function of cook will unseat is display with 600 C. During use this function, according to requirement, there are 8 levels for your adjust of temperature by touch the key of "+", "-", "0". with the cooking function requirement, you also adjust timer by touch the key of "+", "-", "0" or "0".

3

- Grill:** when the appliance in standby position. Touch the key of "function" to choose "Grill" it will enter to the function "Grill" and the indicator light of "hot pot and power will light. Which means the function of cook will unseat is display with 600 C. During use this function, according to requirement, there are 8 levels for your adjust of firepower by touch the key of "+", "-", "0". with the cooking function requirement, you also adjust timer by touch the key of "+", "-", "0" or "0".
- Soup:** when the appliance in standby position. Touch the key of "function" to choose "Soup" it will enter to the function "Soup" and the indicator light of "hot pot and power will light. Which means the function of cook will unseat is display with 2000W. 15mins later it will turn into 1500W work to 23 mins. Then turn into 80W work to 35 mins. Finally it turns into 300W working to the end.

- Water:** when the appliance in standby position. Touch the key of "function" to choose "Water" it will enter to the function "Water" and the indicator light of "hot pot and power will light. Which means the function Water of cook will unseat. It display "0:16" and 2000W. Alternately, the appliance in aptitude mode for 18 minutes and turns off automatically, according to requirement you can not adjust of temperature by touche key of "+", "-", "0". with the cooking function requirement, you also adjust timer by touch the key of "+", "-", "0".

- High temperature indicator light:** It will light when the surface temperature of appliances if more than 80 C and it will turn off when the temperature is less than 80C. When the appliance is on other working state. You can touch "Function" till to choose which function you would like to.

Name of product: infrared hotplate
Model No.: IC-198
Voltage: AC 220-240V
Wattage: 2000W
Weight: 2.8KG
Size: 380x310x80

Trouble shooting
If there is something wrong with the infrared hotplate, please check as follows before sending to repair.

4

Please read this manual carefully before using, in order to take full advantage of its reference, if you found some problems. Please contact your local dealer.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
- WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

National store L.L.C.
P.O Box 284 Dubai, UAE.

Made in china.

1

FEATURES

The electric range is new products which using infrared cheating electric stove. It is particularly

Appropriate the needs of modern cooking for the family, mainly has the following advantage:

- New technology, for infrared heating: heat transfer using heating heat transfer using infrared light waves. On electromagnetic radiation heating effect.
- All types of cookware can be used such as iron, aluminum, copper, ceramic, heat resistant glass, heat resistant materials, equipment, etc. And meet the steaming, boiling, fried, BBQ, hot pot with different cooking methods.
- Environmental protection: No shoot, no flame, no exhausted gas of cooking is safer hygiene.
- Microcomputer control, fire temperature is automatically adjusted easy to operate.
- Ceramic glass with superior hardness, easy to clean, durable.

Picture structure:

Crystal plate

Heater

Control panel



COOKWARE CHOICES

Any pot could be used. Such as iron, aluminum, Copper ceramics. Heat resistant glass and any heat resistant utensils. The infrared hotplate makes use of the far infrared to heat the food so please choose the best cookware to make it more effective. We suggest choosing flat-bottomed pan as below:

2

Malfuction	disposal
After plugging in there is no warning sound and the indicator light of "on/off" does not glow	1. check whether the plug disquamate with supply socket 2. Check for the power supply witch or the fuse open circuit 3. Check for power failure
E1	Supply voltage is too low
E2	Supply voltage is too high
E3	Furnace surface sensor-short circuit
E4	SCR sensor short circuit
E5	Temperature is too high
E6	SCR sensor temperature is too high
E7	Fan failure

After sale service

In order to get the best service for you, please note the below:

- The electric range warranty is for one year based on invoice and guarantee repair list, if the defction caused by inappropriate uses of customer, repair fee will be charged.
- During warranty period please do not disassemble the appliance case. Please contact seller or the local special repair department.

5

كراون

صليحة ساخنة (بالطاقة تحت الحمراء) IC-198



موديل IC-198

الوقاالت التشغيلي: 220 - 240 فولت

دليل الإستخدام

شكراً لاستخدامكم هذا الجهاز الذي الرابع من كراون آين . يرجى قراءة دليل التعليمات بعناية للتأكد من التقييم بشكل قد يملك الضمان الخاص بجهازكم ويعرض هيكله لتفكير.

تحذير

- قراءة دليل المستخدم بعناية قبل البدء باستخدام هذا الجهاز وخطفه في مكان مناسب الرجوع إليه عند الحاجة.
- التأكد من الوقول التشغيلي المباشر إليه على الجهاز يتوافق مع الوقول الكهربائي للبلد التي الكهربائية، إن لم يكن الرجاء عدم استخدام الجهاز والالتصاق بالموعد.
- يُمنع لمس الكهربيين بعيداً عن الأسلاك الباردة في الموعد الحدة، كي لا تتسبب.
- عدم استخدام ألوان حدة في معنية عند تنظيف الجهاز لأن ذلك يتسبب في حرج الزجاج.
- يجب وضع الجهاز على سطح مستو وبشكل آفقي بعيداً عن متناول الأطفال والتأكد من وجود مسافة خالية لا تقل عن 10 سم حوالي الجهاز لأن حرارة الجهاز مرتفعة.
- لا تتعرض للجهاز في الماء أو أن تشطفه تحت المصنور لتجنب خطر حروق منعمة كهربائية.
- في حال تشغيل الجهاز فإن درجة حرارة سطح الجهاز تستعمل إلى مستوى عال إذا يجب الحذر وعدم لمس يديك، واستخدام قفازات القطن عند مساعدة الأجزاء الباردة للجهاز.
- عدم السماح للأطفال والإفراط من الجهاز. كما أنه يجب مراقبتهم كي لا يلعبوا بالجهاز.
- لا تزعج شبكة الكهربيين بأي شيء على حدة الحرارة أو أي سطح يتوسط حدة الجهاز.
- لا تلمس شبكة الجهاز أثناء تشغيله أو عندما يكون ساخناً بعد الانتهاء من استخدامه.
- لا تلمس الأجزاء فوق الجهاز أثناء تشغيله.
- التأكد من أن أوعية الطبخ أو الأبريق غير حادة من القابل أثناء تشغيل الجهاز.
- يجب عدم لمس سطح الجهاز عندما تكون أوعية الطبخ حارة.
- لا تستخدم الجهاز إذا لم تكن متأكد من سلامة التوصيل على سطحه.
- لا تلمس المواد القابلة للاشتعال على سطح الجهاز.
- يجب عدم استخدام الجهاز في أوضاع حارة غير آمنة، ولا تستخدمه في الأماكن المغلقة، يجب إبقاءه بعيداً عن النيران.
- بعد تنظيف الجهاز يجب فصله تماماً عن التيار الكهربائي والتأكد من جفافه تماماً قبل التشغيل مرة أخرى.
- لا تستخدم الجهاز إذا كان سطحه دافئاً أو عندما تكون أحد مكوناته دافئة أو بعد تشغيل الجهاز في مكان مغلق أو تحت الأثاث.
- في حالة الإحتياج لأي إصلاح وفي حال تلف شبكة الكهربيين، يجب استبداله من قبل الشركة المصنعة أو وكيل خدماتها من قبل منتج الجهاز أو معطفره الإلكتروني أو الصيانة الكهربائية.
- لا تستخدم الجهاز من قبل الأشخاص (بمن فيهم الأطفال) مع انخفاض القدرات البدنية والسمية أو العقاب، أو عدم وجود الخبرة والعرفه، ما لم تكن قد اعتيقت لهم تعليمات بشأن استخدام الأجهزة من قبل الشخص المسؤول.
- هذا الجهاز لا يستخدم في الأماكن المغلقة.
- يجب عدم استخدام الجهاز من خلال جهاز توقيت خارجي أو نظام متفصل لتتأكد من بعد.
- إذا كان سطح الطهي للجهاز ممتدداً، يجب إبقاء تشغيل الجهاز متنازلة أثناء حركات منعمة كهربائية.

مميزات الجهاز

- المميزات الكهربائية التي تشتمل على الأتمتة تحت الحمراء التي تستخدم في الأجزاء الحديثة. وهذه الأجزاء مبنية لاستخدام البيع الحديثة للأشياء على وجه الخصوص، ولها المميزات الرعة التالية:
- استخدام الكهربيين الحديثة باستخدام الأتمتة تحت الحمراء، يتم بت موعد الأتمتة تحت الحمراء قبل الحرارة داخل جسم الوعاء بأكثر الأتمتة والكهربيين.
- يمكن استخدام جميع أنواع أوعية الطبخ المستوعبة من الحديد الأيونومي والحداس، سوسايت، الأربعة الزجاجية المقوية للحرارة، أو أي مواد مقاومة للحرارة، المعادن، اليه، والألمنيوم، الفولاذ، والفولاذ المقاوم للصدأ، وكذلك أواني المطبخ الحديثة.
- حماية بيئية لا تشتمل، لا يجب، لا استنفاد الغاز السام، مما يجعله أكثر أماناً وبطاقة.
- يتم التحكم بالجهاز عن طريقة ترميز كميونيت. يتم تعديل درجة حرارة التسخين بسهولة تامة.
- السطح مستوعب من الزجاج مزودة بشفرة، سهل التنظيف، لا يحتاج إلى تنظيف.

1

صورة الجهاز وإبعاده



خيارات الطبخ:

يمكن استخدام أي وعاء للطبخ مثل الحديد والأيونومي والحداس والسيراميك، الزجاج المقاومة للحرارة، أو أواني مقاومة للحرارة. إن سطح التسخين تحت الحمراء يحتاج من استخدام الأتمتة تحت الحمراء الحديثة لتسخين الطعام كما يرجى اختيار أفضل أنواع الأوعية الجاهزة أكثر فعالية. يرجى اختيار أوعية ذات باح مسطح على السطح الخارجي.



مميزات التشغيل:



2

استكشاف الأخطاء وإصلاحها

في حال توقف الجهاز عن العمل، يرجى مراجعة الجدول التالي قبل إرساله إلى الوكيل للاستلاج.

الخطأ المقترح	المشكلة
بعد التوصل إلى الجهاز، لا تظهر الأضواء حوت لتعديري وعدم إضاءة لمبة التشغيل "الضوء"	1. تحقق من دخول التيار في الموعد الكهربائي بشكل صحيح. 2. تحقق من عدم وجود قطع في طول أوعية التحكم الرئيسية. 3. تحقق من عدم تلفها أثناء التثبيت الكهربائي الرئيسية.
E1	الفرق التشغيلي الرئيسي منخفض جداً.
E2	الفرق التشغيلي الرئيسي عال جداً.
E3	يوجد عيب كهربائي في حساس سطح الجهاز.
E4	يوجد عيب كهربائي في حساس SCR.
E5	الحرارة أعلى من الحد المسموح.
E6	حرارة حساس SCR عالية.
E7	الفرقة لا تعمل.

المواصفات الفنية:

رقم الموديل	IC 198
الوقاالت التشغيلي	220 - 240 فولت
الإستعمال	نظام 2000
الوزن	2.8 كغ
أبعاد الجهاز	380 x 310 x 80 سم

معالجة التخلص من الجهاز:



هذا الرسد يعني التخلص من الأجهزة الكهربائية في حاوية تفلات مملئة غير مصفوفة واستخدام مرافق جمعيات متخصصة. تصال بالجهات الحكومية المحلية (البلديات) للحصول على معلومات بشأن التخلص من هذا النوع من الأجهزة. إذا لم التخلص من الأجهزة الكهربائية في سلال القمامات أو القمامة، يمكن أن تضرر المواد الخطرة إلى المياه الجوفية ويهدد في التلوث البيئية والحدائق المزراع في الصمة المائية.

4

- قبل الطبخ:** يستخدم هذا الزر المثلثة ليدون لمس الأضواء بعد فحصه، تتوقف كافة وظائف الجهاز بشكله "قبل التسخين" ثم ينفذ مرة أخرى.
- الوقت يتحكم:** هذا الزر لتغيير الوقت يمكنك التحكم بالوقت عن طريق لمس مفتاح "+", "-", "0". عند لمس الأزرار "+", "-", "0" لفترة، فله سيتم ضبط الوقت بواقع 10 دقائق لكل ضغط من "00:00" إلى "3:59". عند لمس الأزرار "+", "-", "0" بشكل خفيف، فله سيتم ضبط الوقت بواقع 1 دقيقة لكل ضغط من "00:00" إلى "3:59".
- في حال عمل ضبط الوقت:** يعمل الجهاز لمدة 2 ساعة ثم يتوقف تلقائياً. الرجاء استخدام ضبط الوقت في حال ضبط المياه أو التوربية.
- لمس مفتاح "+", "-", "0":** يمكن لمس هذه الأزرار لتعديل مستوى الطاقة ودرجة الحرارة والوقت الزمني. هناك 8 مستويات للتحديد حسب الرعة عن طريق لمس مفتاح "+", "-", "0".
- التشغيل / إيقاف:** عند لمس هذا الزر يسمح للجهاز في وضع الاستعداد وبالتالي يمكن أن تبدأ باستخدام بقية الوظائف. لمس هذا الزر مرة أخرى لإيقاف تشغيل الجهاز.
- الطاقة:** سيظهر لك استهلاك الكهرباء التي تستهلكها.

الوظائف

- Hot Pot:** "Hot Pot" عندما يكون الجهاز في وضع الاستعداد، لمس زر "Function" لإختيار "Hot Pot". سيظهر مؤشر "Hot Pot" والتشغيل ويتم عرض 2000 وات. كما أن أداء الطاقة ووظائف التشغيل الخاصة بك، هناك 8 مستويات للتحديد ببقار الطاقة والوقت عن طريق الضغط على الأزرار "+", "-", "0".
- Fired:** عندما يكون الجهاز في وضع الاستعداد، لمس زر "Function" لإختيار "Fired". سيظهر مؤشر "Fired" والتشغيل ويتم عرض 600 C. أثناء استخدام هذه الوظيفة ووظائف التشغيل الخاصة بك، هناك 8 مستويات للتحديد ببقار الطاقة والوقت عن طريق الضغط على الأزرار "+", "-", "0".
- Grill:** عندما يكون الجهاز في وضع الاستعداد، لمس زر "Function" لإختيار "Grill". سيظهر مؤشر "Grill" والتشغيل ويتم عرض 600 C. أثناء استخدام هذه الوظيفة ووظائف التشغيل الخاصة بك، هناك 8 مستويات للتحديد ببقار الطاقة والوقت عن طريق الضغط على الأزرار "+", "-", "0".
- Soup:** عندما يكون الجهاز في وضع الاستعداد، لمس زر "Function" لإختيار "Soup". سيظهر مؤشر "Soup" والتشغيل ويتم عرض 2000 وات. بعد 15 دقيقة سوف تتحول إلى 1500 وات لمدة 23 دقيقة، تتحول إلى 800 وات حتى 35 دقيقة، وأخيراً يتحول إلى 300 وات العمل حتى النهاية.
- High Temperature:** عندما يكون الجهاز في وضع الاستعداد، لمس زر "Function" لإختيار "Water". سوف يظهر مؤشر "Water" والتشغيل ويتم عرض "0:16" و 2000 وات. سيعمل الجهاز لمدة 18 دقيقة، يتوقف تلقائياً أثناء استخدام هذه الوظيفة ووظائف التشغيل الخاصة بك، هناك 8 مستويات للتحديد ببقار الطاقة والوقت عن طريق الضغط على الأزرار "+", "-", "0".
- مؤشر ارتفاع درجة الحرارة High Temperature:** سوف يظهر هذا المؤشر عندما تكون درجة حرارة سطح الجهاز أكثر من 80 C وسوف يمتلئ عندما تكون درجة الحرارة تسخن الجهاز أقل من 80 C.

3

4