

CROWN

CITRUS JUICER

MODEL NO.: CJ-442

220-240V, 50/60Hz, 30W



INSTRUCTIONS MANUAL

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

Do not immerse the motor unit in water or any other liquid. Do not rinse it under the tap and do not clean it in the dishwasher.


Warning

- Check if the voltage indicated on the base of the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or other parts are damaged.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended for household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Children should be supervised to ensure that they do not play with the appliance.
- Never let the appliance operate unattended.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Never use any accessories or parts from other manufacturers. If you use such accessories or parts, your guarantee becomes invalid.
- Always place the appliance on a stable, level and horizontal surface.
- To prevent the appliance from overheating, never press down too hard on the reamer or operate it for more than 30 seconds at any one time or over a period of more than 10 minutes. Leave the appliance to cool down when using for longer periods.

Power consumption in off mode: 0,0W

Parts identification

- Transparent lid
- Large squeezing cone
- Small squeezing cone
- Filter
- Adjustable filter attachment
- Juice jug
- Rotating pin
- Appliance body

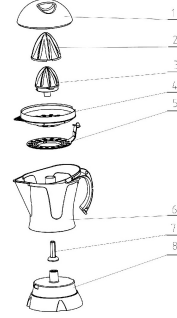

USING THE APPLIANCE

Clean the cone and the jug before you use the appliance for the first time.

The citrus press is equipped with two squeezing cones: a small one for lemons and lime and a large one for oranges or grapefruits, to be applied over the smaller cone by matching the slots with the tabs of the latter.

- Put the plug in the wall socket.
- Switch on the appliance by pressing a halved citrus fruit firmly onto the cone.
- Remove the cone, take the jug from the motor unit and pour out the juice.

CLEANING

Cleaning the appliance and its parts is easiest immediately after use.

Never immerse the motor unit in water nor rinse it under the tap.

- Unplug the appliance.
- Remove the cone and jug from the appliance.
- Rinse the cone and jug under a hot tap.
- Clean the motor unit with a moist cloth.

CORRECT DISPOSAL OF THIS PRODUCT


This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



التخلص الصحيح من هذا الجهاز
تشير هذه العلامة إلى أنه لا ينبغي التخلص من هذا الجهاز مع النفايات المنزلية الأخرى في جميع أنحاء دول الاتحاد الأوروبي. ولتجنب أي ضرر محتمل للبيئة أو صحة الإنسان نتيجة التخلص غير المناسب من النفايات، يرجى إعادة تدويره بطريقة مسؤولة لتعزيز إعادة الاستخدام المستدام للمواد. ولإعادة الجهاز المستعمل، يرجى استخدام أنظمة التجميع والإرجاع أو التواصل مع البائع الذي جرى شراء الجهاز منه والذي يمكنه إعادة تدوير هذا الجهاز بطريقة آمنة من الناحية البيئية.



تعريف الأجزاء
١. غطاء شفاف
٢. مخروط عصر كبير
٣. مخروط عصر صغير
٤. فلتر
٥. ملحقات فلتر قابل للتبديل
٦. إبريق عصير
٧. جوس دوران
٨. هيكل الجهاز

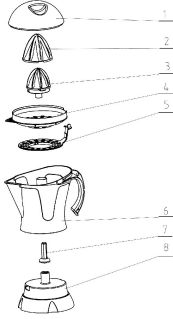

استخدام الجهاز

يجب تنظيف المخروط والإبريق قبل استخدام الجهاز لأول مرة.
مصهرة الحمضيات مزودة بمخروطين للعصر: مخروط صغير للليمون واللبون الأخضر ومخروط كبير للبرتقال أو الجريب فروت وبنم وضهما فوق المخروط الأصغر من خلال مطابقة فتحاتهما مع أسنة المخروط الأصغر.

- توصيل القابس بمقبس التيار الكهربائي.
- تشغيل الجهاز بالضغط بقوة على كمره حمضيات مقسومة إلى قسمين داخل المخروط.
- إزالة المخروط وإخراج الإبريق من وحدة المحرك وسكب العصير.

التنظيف

يعتبر تنظيف الجهاز وإجزائه أسهل ما يكون مباشرة بعد الاستخدام. ويجب عدم غمر وحدة المحرك في الماء ولا حتى تنظيفها تحت الصلور.

- فصل الجهاز عن التيار الكهربائي.
- إخراج المخروط والإبريق من الجهاز.
- شطف المخروط والإبريق تحت ماء الصلور الساخن.
- تنظيف وحدة المحرك بتفحمة فرش مبللة.

هلم:

يرجى قراءة هذه التعليمات الاحتياطي بها للرجوع إليها في المستقبل

خطر

يجب عدم غمر وحدة المحرك في الماء أو أي سائل آخر، ولا شطفها تحت الصلور ولا حتى تنظيفها في غسالة الأطباق.

- تحذير
- التأكد من توافق الجهد الموضح على قاعدة الجهاز مع جهد التيار الكهربائي المحلي قبل توصيله.
- عدم استخدام الجهاز إذا كان القابس أو سلك التيار الكهربائي أو أي أجزاء أخرى تالفة.
- في حال تلف سلك التيار الكهربائي، يجب استبداله من خلال الشركة المصنعة أو وكيل الصيانة التابع لها أو أشخاص مؤهلين معالجين لتجنب أي خطر.
- هذا الجهاز مخصص للاستخدام المنزلي فقط.
- "هذا الجهاز غير مخصص لاستخدام من قبل الأشخاص (بما في ذلك الأطفال) ذوي القدرات البصرية أو السمع أو العقلية، أو فئة القدرة والسرعة، إلا إذا تلقوا الترخيص أو تعليمات بشأن استخدام الجهاز من قبل شخص مسؤول عن سلامتهم".
- منع الأطفال من استخدام هذا الجهاز. واحتفاظ بالجزء والسلك بعيدا عن متناول الأطفال.
- إسئل الجهاز عن مصدر التيار الكهربائي وأوقف تشغيله قبل تغيير الملحقات أو الاقتراب من الأجزاء المشحونة أثناء الاستخدام.
- مراقبة الأطفال بما يضمن عدم عبثهم بالجهاز.
- عدم ترك الجهاز يعمل من دون مراقبة.
- يجب فصل الجهاز دائما عن مصدر التيار الكهربائي في الحالة التي يكون فيها من دون مراقبة وفصل التجميع أو الفك أو التنظيف.
- هذا الجهاز مصمم للاستخدام المنزلي وما شاكل ذلك، مثل:
 - مطابخ الموظفين في المتاجر والمكاتب وبيئات العمل الأخرى.
 - بيوت المزارع.
 - من قبل العمالة في الفنادق والموتيلات وغيرها من البيئات السكنية.
 - بيئات المجتمعات والأقارب.
- عدم استخدام أي ملحقات أو قطع غير على الإطلاق وإزالة من جهات تصنيع أخرى، وفي حال استخدام هذه الملحقات أو القطع، يصبح الضمان ملغيا.
- يجب وضع الجهاز دائما على سطح ثابت ومستو وأفق.
- لمنع ارتفاع درجة حرارة الجهاز، يجب عدم الضغط بقوة على المثقب أو تشغيله لأكثر من 30 ثانية في المرة الواحدة أو لأكثر من 10 دقائق. يجب ترك الجهاز يبرد عند استخدامه لفترات طويلة.

استهلاك التيار الكهربائي في وضع الإيقاف: 0.0 وات

راون

عصارة حمضيات

موديل رقم: CJ-442

220-220 فولت، 60/50 هرتز، 30 واط



كتيب تعليمات التشغيل