

**INSTRUCTION MANUAL
STEAM IRON
MODEL: SI-407**




220-240V 50-60Hz 1800W

Please read these instructions before using the appliance

Main Features and structure:

The product has many functions such as temperature regulating, Spraying, Dry Ironing, Steam, Strong steam, Self-Cleaning Function etc. and is with characteristics: luxury shape, high heat efficiency, easy using, good ironing result, work saving and time saving, and so on.

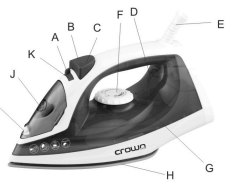

- A: Burst steam button
- B: Spraying button
- C: Steam regulating Knob
- D: Self-clean button
- E: 360 degree swivel cord
- F: Cover of water filler
- G: Spraying mouth
- H: Temperature adjusting knob
- I: Water Tank
- J: Soleplate
- K: Indicator light

Read all instructions before using the iron

For house hold use only

1. Use the iron for its intended purpose, for ironing fabrics on board.
2. To protect against burns or injury to persons, do not use iron steam fabrics while being worn on the body.
3. The iron should always be turned 'OFF' before plugging or unplugging from outlet. Never pull cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surface. Allow the iron to cool completely before storing.
5. Always disconnect iron from electrical outlet for filling or emptying water and when not in use.

6. To avoid risk of electric shock, do not operate iron with a damaged cord or if the iron has been dropped or damaged. For repair, take it to an authorized Sava Service center.
7. Close supervision is necessary for this appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
8. Burns can occur from touching hot metal parts, hot water, or steam. Hot water may leak from the iron. Use caution when filling or turning the steam iron upside down.
9. To protect against burns or injury to persons, do not direct steam toward the body when ironing.
10. The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
14. The plug must be removed from the socket-outlet by the water reservoir is filled with water for steam irons and irons incorporating means for spraying water.

How to fill with water:

Make sure the iron is turned off and the power cord is unplugged before the electrical outlet.

1. Set the 'Variable' steam knob to the '0' position before filling the iron with water.
2. Open the 'Water Fill' Opening and fill the Tank up to the 'MAX' Line on the tank.
3. The water level can be observed through the transparent part of the tank, when iron placed vertically, in case of water level becomes low, refill the tank, following the procedure described in steps 1 to 3 above.
4. Pour out the remaining water after use.

Note:

Most tap water can be used in this iron. Do not use water additives or substitute water such as lemon or scented water in the steam iron, this can cause stains or damage the iron. Do not fill the water more than the 'MAX' position.

How to use as dry iron:

1. Position the iron vertically.
2. Plug the iron.
3. Set Steam regulating Knob to MIN position.
4. Preheat the iron until the indicator light goes out. Now dry ironing can begin.

How to use the spray:

Before using the spray feature, check the fabric label for ironing instructions because some fabrics may be

spotted or stained with moisture.

The spray feature is particularly helpful for removing stubborn wrinkles and extra dampening is needed. The spray may be used with steam or dry ironing. Simply pump the Spray Mist knob when spray is desired.

How to use as steam iron:

Fill the iron as described in "How to fill with water".

- 1) Position the iron vertically and turn the Temperature Control Dial to the steam position.
- 2) Plug the Cord into the electrical outlet.
- 3) Set the Temperature Control Dial to the steam position. Steam Ironing is only possible when at higher temperature settings indicated with "MAX" mark, otherwise the water will leak from the soleplate.
- 4) Preheat the iron until the indicator light goes out. The light will turn off when the indicated setting reaches the correct temperature.
- 5) Turn the Temperature regulating knob to the required setting for different types of fabric. Now steam ironing can begin.

How to use the burst of steam:

The burst of steam feature provides additional steam for removing stubborn wrinkles. It may be used with steam or dry ironing. Press the Power Steam button to release the surge of steam. Pressing the button several times may be necessary to prime the surge system. Wait a few seconds for the steam to penetrate the fabric before pressing the button again for more steam.

Note:

For optimum steam quality, do not apply more than three successive shots after the indicator light goes off.

After each use:

- 1) Turn the iron off and unplug.
- 2) Empty the iron immediately after using. Do not store the iron with water in it.
- 3) Wait until the iron has cooled before storing it, and always set it on the flat Rest to protect the soleplate from scratches, corrosion or stains.
- 4) After letting iron cool down completely, store the iron vertically in a safe place.

Outside surface of the iron:

After unplugging and cooling the iron, simply wipe off with a damp cloth and if necessary, use a mild detergent. NEVER USE ANY HARSH CLEANERS.



حالة في المواد الصناعية على درجة حرارة عالية جدًا ، فإن ذلك لن يؤدي إلى تلف الفماش الجسب، بل غالباً ما يؤدي إلى تعقيد قاعدة الكهروا بدسج السامعي الثانية (بوليمرات) وأفضل طريقة لإزالة البقايا الصناعية من القاعدة هي تسخين الكهروا وكذا فوق قطعة فاشش فلبنية لذيبة.

تحذير: عدم إستخدام منطقات الكهروا البخارية في الكهروا لأنها قد تلحق الأضرار الجسيمة الماملة داخل الكهروا.

الطريقة لتنظيف الذاتي: فوراً سيق عمل الكهروا أفضل نتائج وتتميز وتدمم أفضل في حالة إستخدام التنظيف الذاتي مرة واحدة في الشهر، أو أكثر حسب الإستخدام.

1. تعبئة خزان المارح من التسلف بالماء.
2. وضع الكهروا على كعها المنطقي.
3. إختيار قرص التحكم في درجة الحرارة لوضعية "الحمد الأقصى".
4. توصيل الكهروا.
5. تشغيل الكهروا حتى ينطفئ ضوء المؤشر.
6. فصل الكهروا عن مأخذ التيار الكهربائي.
7. وضع الكهروا بشكل أفقي فوق الحوض.
8. الصعدف واستمرار على زر "التنظيف الذاتي" طوال الوقت، سوف ينبعث الماء المعلي والمبارح من الفتحات الموجودة في قاعدة الكهروا.
9. تمرير الكهروا لأمام والخلف وفي هذه الأثناء، يجب الإستمرار في السماح للمبارح والماء بالتسرب إلى أن يصبح خزان المارح فارغاً تقريباً.
10. إبتلاع زر "التنظيف الذاتي".
11. توصيل الكهروا.
12. ضبط قرص درجة الحرارة على وضعية "الحمد الأقصى"، وثرك الكهروا تسخن مرة أخرى، وستيخرج مقدار ما تبقى من ماء داخل غرفة المارح ويبدأ الكهروا من خلال قاعدة الكهروا.
- أثناء عملية الجاف، الخبير، يُسمح باستخدامها فوق قطعة فاشش قديمة الكهروا.

Soleplate :
Starch and other residue may be easily removed from the soleplate with a damp cloth. To avoid scratches the finishing, never use a metallic pad to clean the Soleplate, and never place the iron on a rough surface. If synthetics are ironed at too high temperature not only is the fabric usually ruined, but the iron Soleplate is often covered with the melted remains of synthetic fabric. The best way to remove synthetic residue from the Soleplate is to heat the iron and to iron over an old cotton rag.

CAUTION :
Never use steam iron cleaners in the iron, since they may damage the working parts of the iron.

Maintenance: Self Cleaning :
IMPORTANT : Your iron will give the best ironing results and last longest if you apply the Self Cleaning once a month, or more depending upon the usage.

1. Filling the water tank up to half with water.
2. Position the iron on its rear feet.
3. Select the temperature control dial to "MAX".
4. Plug the iron.
5. Allow the iron to heat up until the indicator light first goes out.
6. Unplug the iron from the electrical outlet.
7. Keep the iron horizontally over the sink.
8. Press down the "Self Clean" button all the time. Boiling water and steam will now emit from the holes in the soleplate.
9. Move the iron forwards and backwards while this happens, go on letting steam and water escape until the water tank is virtually empty.
10. Release the "Self Clean" button.
11. Plug in the iron.
12. Set the temperature dial to the "MAX" position, let the iron heat up again, the remainder of the water inside the steam chamber will now vaporize and leave the iron through the soleplate.

During this process of dry steaming it is advised to use an over and old piece of cloth.

تعتبر هذه الرشة مفيدة بشكل خاص لإزالة الترسبات المتبقية وضمان تكون هناك حاجز إلى ترطيب إضافي. يمكن وضع الكهروا بسهولة وأمان فوق الحوض. الصعدف واستمرار على زر "التنظيف الذاتي" طوال الوقت، سوف ينبعث الماء المعلي والمبارح من الفتحات الموجودة في قاعدة الكهروا. تمرير الكهروا لأمام والخلف وفي هذه الأثناء، يجب الإستمرار في السماح للمبارح والماء بالتسرب إلى أن يصبح خزان المارح فارغاً تقريباً. إبتلاع زر "التنظيف الذاتي". توصيل الكهروا. ضبط قرص درجة الحرارة على وضعية "الحمد الأقصى"، وثرك الكهروا تسخن مرة أخرى، وستيخرج مقدار ما تبقى من ماء داخل غرفة المارح ويبدأ الكهروا من خلال قاعدة الكهروا. أثناء عملية الجاف، الخبير، يُسمح باستخدامها فوق قطعة فاشش قديمة الكهروا.

قبل استخدام خاصية الرشة، يجب مراجعة تعليمات في الأقمشة الموضحة على الملصق ذلك لأن بعض الأقمشة قد تكون مسددة أو ملطخة بالزيتونة.

تعتبر هذه الرشة مفيدة بشكل خاص لإزالة الترسبات المتبقية وضمان تكون هناك حاجز إلى ترطيب إضافي. يمكن وضع الكهروا بسهولة وأمان فوق الحوض. الصعدف واستمرار على زر "التنظيف الذاتي" طوال الوقت، سوف ينبعث الماء المعلي والمبارح من الفتحات الموجودة في قاعدة الكهروا. تمرير الكهروا لأمام والخلف وفي هذه الأثناء، يجب الإستمرار في السماح للمبارح والماء بالتسرب إلى أن يصبح خزان المارح فارغاً تقريباً. إبتلاع زر "التنظيف الذاتي". توصيل الكهروا. ضبط قرص درجة الحرارة على وضعية "الحمد الأقصى"، وثرك الكهروا تسخن مرة أخرى، وستيخرج مقدار ما تبقى من ماء داخل غرفة المارح ويبدأ الكهروا من خلال قاعدة الكهروا. أثناء عملية الجاف، الخبير، يُسمح باستخدامها فوق قطعة فاشش قديمة الكهروا.

6. يجب تشغيل الكهروا بسلك ثالث أو إذا لم يتطو أو لا تتوفر للثالث وذلك لتجنب خطر التعرض لصدمة كهربائية. وإصلاح الكهروا يجب تسليسها إلى مركز خدمة Sava المعتمد.

7. حديد الأجزاء الداخلي عند استخدام الكهروا من قبل الأطفال والأطفال مع عدم ترك الكهروا من دون مراقبه.
8. يمكن أن تحدث حروق بالنتيجة لملامسة الأجزاء المعدنية الساخنة أو الماء الساخن أو البخار، وقد يتسرب الماء الساخن من الكهروا. يجب تجنب الأجزاء عند تعبئة الكهروا أو إفهنا.
9. الحماية من الحروق أو الإصابة بالكهرباس، وعند وضعها على عمل العنصر اليه، يجب التأكد من ثبات الملحقة أو الذين يتعاملون في الكهرباء والمعروف ما لم يشراف عليهم شخص مسؤول عن صلاحيته. أو بتدبير اليهم تعليمات بشأن استخدام الجهاز بأمان.
10. يجب مراقبه الأطفال للتأكد من عدم عبثهم بالأجزاء.
11. يجب ضمان الجهاز ذو عدم إستخدام الأجزاء (أي ما في فهم الأداة) ذوي التعليمات الفنية أو الحسية أو اللغوية أو الحسية أو الذين يتعاملون في الكهرباء والمعروف ما لم يشراف عليهم شخص مسؤول عن صلاحيته. أو بتدبير اليهم تعليمات بشأن استخدام الجهاز بأمان.
12. يجب مراقبه الأطفال للتأكد من عدم عبثهم بالأجزاء.
13. في حالة تلف سلك إمداد التيار الكهربائي، يجب إستبداله من قبل الفني المعتمد أو إلتحاق الكهروا مع مركز خدمة الكهروا.
14. يجب إزالة الأسلاك من مخرج المقبس قبل تعبئة خزان المياه (بالنسبة للكهرباء البخارية والمكروي ذو التشتت على وسائل أخرى الماء).

كيفية تعبئة المياه: قبل إستخدام خاصية إبتلاع البخار، وضبط الكهروا على وضعية "الحمد الأقصى".

1. ضبط مقياس البخار "المتغير" على الوضع "0".
2. فتح فتحة "تعبئة المياه" وضعية الخزان حتى خط "الحمد الأقصى" الموجود على الخزان.
3. يمكن ملاحظة مستوى الماء من خلال الجزء العلوي من الخزان، وعند وضع الكهروا على عمودي، في حالة الغطاء مسدود الماء، يجب إعادة تعبئة الخزان بإتباع الإجراء الموضحة في الخطوات من 1 إلى 3 أعلاه.
4. سكب المياه وضعية "الحمد الأقصى".

ملحوظة: يمكن استخدام المياه الحنيفة في أغلب الأحيان في هذه الكهروا. يجب عدم استخدام الإضافات الماء أو مياه ممتل يمكن إكتان أو المياه المعطرة في كهروا البخار، ربما يؤدي ذلك إلى تلف الأقمشة أو إتلاف الكهروا. يجب عدم تعبئة المياه بعد تبريد وضعية "الحمد الأقصى".


طريقة الإستخدام ككهروا جافاً: 1. وضع الكهروا بشكل عمودي. 2. توصيل الكهروا. 3. ضبط مقياس البخار على وضعية "الحمد الأدنى". 4. تشغيل الكهروا حتى ينطفئ ضوء المؤشر. 5. إختيار قرص التحكم في درجة الحرارة على وضعية "الحمد الأقصى". 6. فصل الكهروا عن مأخذ التيار الكهربائي.

طريقة الإستخدام ككهروا بخار: 1. وضع الكهروا بشكل عمودي. 2. توصيل الكهروا. 3. ضبط مقياس البخار على وضعية "الحمد الأدنى". 4. تشغيل الكهروا حتى ينطفئ ضوء المؤشر. 5. إختيار قرص التحكم في درجة الحرارة على وضعية "الحمد الأقصى". 6. فصل الكهروا عن مأخذ التيار الكهربائي.

ملحوظة: يمكن استخدام المياه الحنيفة في أغلب الأحيان في هذه الكهروا. يجب عدم استخدام الإضافات الماء أو مياه ممتل يمكن إكتان أو المياه المعطرة في كهروا البخار، ربما يؤدي ذلك إلى تلف الأقمشة أو إتلاف الكهروا. يجب عدم تعبئة المياه بعد تبريد وضعية "الحمد الأقصى".

يجب قراءة هذه التعليمات قبل استخدام الكهروا

الموت الوشيية والموت: من العاصيات على تنظيم درجة الحرارة والريح وكن الجاف البخار والحر الذي وضعية التنظيف الجوي الكهروا على العديد من العاصيات مثل تنظيم درجة الحرارة والريح وكن الجاف البخار والحر الذي وضعية التنظيف الجوي وتتميز بخصائص شكلها ككهروا كدرجة عالية وسهولة الإستخدام وريحه من العاصيات الأخرى.

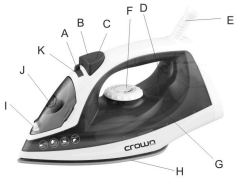

- ز. زر المارح
- ح. مقياس ضبط درجة الحرارة
- ط. خزان المياه
- ي. مزيل البقايا
- ك. زر البخار
- ل. زر إنبعا البخار
- ج. مقياس تنظيم المياه
- د. زر تنظيف الذاتي
- هـ. مكاتب دوران 360 درجة
- و. غطاء تعبئة المياه

كيفية قراءة جميع التعليمات قبل استخدام الكهروا: 1. يجب إستخدام الكهروا للغرض المعد له وهو الأقمشة على لوح.

2. عدم في الأقمشة أو تيجورها أثناء ارتداها على الجسم لتجنب من الصدمات أو الإصابات التي يتعرض لها الأشخاص.
3. إبقاء فتحة تشغيل الكهروا دائما على توصيلها من لفهنا من مأخذ التيار الكهربائي. وبدلا من سحب السلك لفهنا من مأخذ التيار الكهربائي يجب إلتصاق الأسلاك. والتأكد من عدم تسرب التيار الكهربائي.
4. عدم إستخدام الكهروا ككاهن ملامسة سطح مسامي. ويجب إزالة الكهروا على تود دائما قبل تخزينها.
5. فصل الكهروا دائما عن مأخذ التيار الكهربائي عند تعبئة أو تفريغ المياه وفي حالة عدم استخدام

كراون

النظير الإرشادي
مكواة بخار
الموديل: SI-407



فولت 60/50 هرتز 1800 وات 240 - 220