

INSTRUCTION MANUAL STEAM IRON MODEL:SI-408




220-240V 50-60Hz 2600W

Please read these instructions for use and have a good look at the illustration before using the appliance

Characteristics and structure:

The products has many functions such as temperature regulating, Spraying, Dry Ironing, Normal Steam, Burst Steam, Self-Cleaning, etc. and is with characteristics: luxury shape, high heat efficiency, easy using, good ironing result work saving and time saving, and so on.

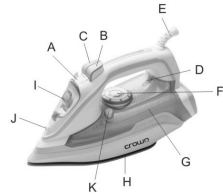

A: Steam regulating knob
B: Spraying button
C: Strong steam button
D: Indicator bulb
E: Movable wire Cord
F: Temperature regulating knob
G: Water tank
H: Soleplate
I: Spraying mouth
J: Cover of water filling mouth
K: Self-clean button

How to fill water:

Pull up the cap of water filling mouth, fill until full, push the cap back to its original position.

How to dry ironing:

1. Turn the temperature regulating knob to "0" position, turn the steam knob to "0" position, put the plug into the socket.
2. Turn the temperature regulating knob to the temperature scale which the ironed clothes required, the indicator will light on, then put the iron on the smooth and stable place vertically.
3. After the indicator turn off, you can begin to iron.

How to spray:

Press the spraying button repeatedly, water will spray out from the spraying mouth, at the time, you should keep enough water in the water tank.

2

How to iron with steam:

1. Fill water in the water tank.
2. Use steam ironing, turn the steam knob to the "1, 2, 3" position, the method for regulating temperature is the same with dry ironing.
3. After indicator turn off, turn the steam knob to the "1, 2, 3" position, steam will spray, you can start to iron.
4. After ironing complete, turn the temperature regulating knob to the "0" position, pull out the plug, take off the water tank, pour out the remaining water, turn the steam knob to the "0" position.

How to use strong steam:

Press down the strong steam button, the base plate will spray out a strong steam. Attention: Strong steam must be used in steam ironing. (The temperature regulating knob must be turned to the steam section).

Attentions:

1. Please read the owner's manual before using the product.
2. Before using, please check the voltage of the product if it is the same with the one in your home.
3. When using steam ironing, you are recommended to use distilled water.
4. During the iron is electrified, operator must not leave, must not let children touch the iron.
5. When filling water or pouring out remaining water. Please pull out the plug first.
6. After using, turn the temperature regulating knob to "0", pull out the plug, put the iron on the smooth and stable place vertically.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
9. The iron must not be left unattended while it is connected to the supply mains.
10. The plug must be removed from the socket-outlet before the water reservoir is filled with water.
11. The iron must be used and rested on a stable surface.
12. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. Children should be supervised to ensure that they do not play with the appliance.

3

3. بعد إيقاف تشغيل المؤشر، يمكن البدء في الكي.

كيفية الرش:

الضغط على زر الرش بشكل متكرر، وسوف يرش الماء من فم الرش، وعندئذٍ، يجب الاحتفاظ بكمية كافية من الماء داخل خزان المياه.

كيفية الكي بالبخار:

1. تعبئة الماء داخل خزان المياه.
2. إستخدام الكي بالبخار وتحويل مقبض البخار إلى الوضع "1، 2، 3"، تعبير طريقة تنظيم درجة الحرارة هي نفس طريقة الكي الجاف.
3. بعد إيقاف تشغيل المؤشر، يجب تحويل مقبض البخار إلى الوضع "1، 2، 3" وسينتشر البخار ويمكن البدء في الكي.
4. بعد اكتمال الكي، يجب تحويل مقبض تنظيم درجة الحرارة إلى الوضع "0"، وسحب القابس وعلع خزان المياه وسكب الماء المتبقي وتحويل مقبض البخار إلى الوضع "0".

كيفية استخدام البخار القوي:

الضغط لأسفل على زر البخار القوي، وستقوم لوحة القاعدة برش بخار قوي. تنبيه: يجب استخدام البخار القوي في الكي بالبخار. (يجب تحويل مقبض تنظيم درجة الحرارة إلى قسم البخار).


تنبيهات:

1. يرجى قراءة دليل المالك قبل استخدام المكواة.
2. قبل الاستخدام، يرجى التحقق من جهد المكواة إذا كان هو نفسه الموجود في المنزل.
3. عند استخدام الكي بالبخار، ينصح باستخدام الماء المقطر.
4. أثناء كهرية المكواة، يجب ألا يعاد المشعل، وعدم السماح للأطفال بلمس المكواة.
5. عند تعبئة الماء أو سكب الماء المتبقي، يرجى سحب القابس أولاً.
6. بعد الاستخدام، يجب تحويل مقبض تنظيم درجة الحرارة إلى الوضع "0"، وسحب القابس، ثم وضع المكواة على مكان أمنس وثابت عمودياً.
7. في حالة تلف سلك الإمداد، يجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة التابع لها أو أشخاص مؤهلين بشكل مماثل لتجنب المخاطر.
8. لا يجوز استخدام المكواة في حالة سقوطها أو ظهور علامات تلف واضحة عليها أو وجود تسرب فيها.
9. يجب عدم ترك المكواة دون مراقبة أثناء توصيلها بمصدر التيار الكهربائي.
10. يجب إزالة القابس من مخرج القابس قبل تعبئة خزان المياه بالماء.
11. يجب استخدام المكواة ووضعها على سطح ثابت.
12. عند وضع المكواة على الحامل الخاص بها، تأكد من ثبات السطح الذي يوضع عليه الحامل.
13. يعتبر هذا الجهاز غير معد لاستخدام الأشخاص (بما في ذلك الأطفال) ذوي القدرات البدنية أو الحسية أو العقلية المنخفضة أو الذين يفتقرون إلى الخبرة والمعرفة ما لم يشرّف عليهم شخص مسؤول عن سلامتهم أو يصدر إليهم تعليمات بشأن استخدام الجهاز بأمان.
14. يجب مراقبة الأطفال للتأكد من عدم العبث بالجهاز.

3

يرجى قراءة هذه التعليمات قبل استخدام المكواة

الميزات الرئيسية والبيك:
تحتوي المكواة على العديد من الخصائص مثل تنظيم درجة الحرارة و الرش و الكي الجاف والبخار و البخار القوي وخاصة التنظيف الذاتي وغيره وتتميز بخصائص شكلها الفانغر وكفاءة حرارية عالية وسهولة الاستخدام وغيره من المصائص الأخرى.

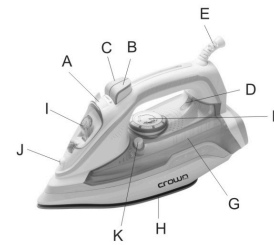

ز. خزان المياه
ح. سوليبيلات
ط. فم الرش
ي. عطاء فم تعبئة المياه
ك. زر التنظيف الذاتي

1. مقبض تنظيم البخار
2. زر الرش
3. زر البخار القوي
4. ضوء المؤشر
5. سلك قابل للحركة
6. مقبض تنظيم درجة الحرارة

كيفية تعبئة المياه:

سحب عطاء فم تعبئة المياه، وتعبئة المياه حتى تمتلئ ثم دفع العطاء مرة أخرى إلى موضعه الأصلي.

طريقة الاستخدام كالمكواة جافة:

1. تحويل مقبض تنظيم درجة الحرارة إلى الوضع "0" وتحويل مقبض البخار إلى الوضع "0"، ثم وضع القابس داخل المقبس.
2. تحويل مقبض تنظيم درجة الحرارة إلى مقبض درجة الحرارة الذي تحتاجه الملابس المكوية، وسيضيء المؤشر، ثم وضع المكواة على مكان أمنس وثابت عمودياً.

2

راون

الدليل الإرشادي

مكواة بخار

الموديل - SI-408



فولت 60/50 هرتر 2600 واط 240 - 220