crown LINE

100L ELECTRIC OVEN

WITH ROTISSERIE & CONVECTION & LAMP

INSTRUCTION MANUAL

Model No.EO-439

220-240V AC 50-60Hz 2800W

Please read carefully before use and keep for future reference

IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, which include the following:

1. Read all instructions before use or cleaning.
2. Close supervision is necessary when any appliance is used near children.
3. Do not immerse cord, plug, or any part of the appliance in water or other liquids.
4. Do not let cord hang over edge of table or counter, or touch hot surfaces.
5. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. If the appliance is damaged or broken, do not repair yourself, if the power cord or the plug is broken or damaged, do not repair or change yourself, please send the appliance to qualified service centre for repair or service.
6. When operating the oven, keep at least four inches (ten centimeters) of space on all sides of the oven to allow for adequate air circulation.
7. To disconnect, turn the control to OFF, before removing the plug.
8. Unplug from outlet when not in use and before cleaning. Always hold the plug, but never pull the cord.
9. Allow the appliance to cool before putting on or taking off parts, and before cleaning
10. Extreme caution must be used when moving an appliance containing hot oil or food.
11. Do not cover any part of the oven with metal or cloth, it may cause overheating of the oven.
12. Do not place any item on the oven or cover the oven.
13. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
14. Never leave the appliance unattended in working.
15. Oversized foods or metal utensils can not put into the appliance as they may create a fire or risk of electric shock.
16. Extreme caution should be exercised when using containers constructed of anything other than qualified metal or qualified ceramics.
17. Do not place any of the following materials in the oven: plastic, paper, or anything similar.
18. Do not use any accessories other than manufacturer recommended accessories in this oven.
19. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
20. Do not use this appliance for any use other than its intended use.
21. This appliance is for HOUSEHOLD USE only.
22. The glass door is heavy, please hold the handle until the door is completely open, do not let the door fall itself.
23. Children should be supervised to ensure that they do not play with the appliance
24.This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities,or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. If the supply cord damaged,it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
26. The temperature of accessible surfaces may be high when the appliance is

LIST OF COMPONENTS

1. Oven indicator
2. Timer
3. Heating dial
4. Temperature dial
5. Rottisserie & Convection dial
6. Inside lamp dial
7. Door handle
8. Wire rack
9. Bake tray
10. Rotisserie forks
11. Rotisserie handle
12. Tray handle

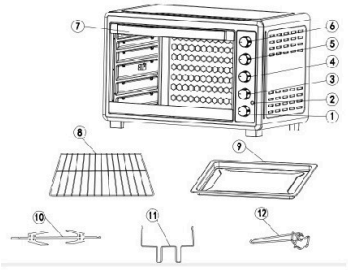

INNER LAMP DAIL

1. OFF
2. ON

ROTISSERIE & CONVECTION DIAL

1. OFF
2. Convection
3. Rotisserie
4. Rotisserie & Convection



TEMPERATURE DIAL

Turn the selector clockwise to the proper position,
at 100℃ -250℃ Between, adjust the baking temperature.

HEATING DIAL

1. OFF
2. Top heating
3. Bottom heating
4. Top & Bottom heating

TIMER DIAL

When timer is turned on, the inside lamp is ON,
oven is on work.
When timer is turned off, the inside lamp is OFF,
oven is non work.

BEFORE USE

- Ensure that there is enough ventilation around the oven.
- Ensure that the oven is completely dry before use.
- The oven should not be placed on untreated wooden surface. Place the oven on a heat resistant surface.
- The feet of the oven can leave some marks on the table, if this happens, remove the marks with a damp cloth.

OVEN USE

- Turn the thermostat dial clockwise to the desired temperature.
- Turn the Rotisserie/convection selector dial to the desired position.
- Turn the Heating selector dial to the desired position.
- Turn the timer dial clockwise to the desired cooking time.
- The power light will light up after timer is turned on, and will go out when the timer is turned to OFF.

- When the cooking time is over, the timer will auto shut off and the bell will ring.
- If the cooking is finished earlier than the set cooking time, please turn back the timer to OFF to turn off the oven.
- In the first use of this oven, there might be some light smoke coming out from the oven,this is normal. After 5-10 minutes the smoke will disappear.
- In order to get better cooking performance, it is recommended to pre-heat the oven about 10-15 minutes.

ROTISSERIE USE

1. Put one skewer through the pointed end of the spit, making sure the points of skewer face towards the spit's pointed end. Slide the skewer towards the square end of the spit.
2. Insert the spit directly through the center of the food which you want to roast.
3. Put the other skewer through the pointed end of the spit, making sure the points of skewer face the spit's square end.
4. Put the two skewers into the food, then secure both skewers with the thumbscrews.
5. Make sure the food is centered on the spit.
6. Insert the pointed end of the spit into the drive socket, make sure the square end of the spit rests on the spit support.
7. Plug the oven.
8. Set the thermostat to 250℃.
9. Turn the timer to the time which you require, the power indicator will light up. Normally it takes 30 minutes to roast a 2.5Kg(5.5Pd) weight chicken.
10. Set the selector to Rotisserie or Rotisserie & Convection setting, the rotisserie starts rotating.
11. When roasting is completed, turn back the timer to OFF.
12. After the oven is cooled, place the hooks of the rotisserie handle under the grooves on both sides of the spit. Lift the right side of the spit first, move towards right side a little bit, so that the left side of the spit goes out of the drive socket. Then carefully move out the roasted food from the oven.
13. Take the food off the spit.

GRILL COOKING

- Leave the door at the open point.
- Turn the selector to GRILL setting (top heating), and Convection is recommended.
- Turn the temperature dial to 250℃.
- Turn the timer to the desired grill time.
- When the grill cooking is done, turn back the timer to OFF to turn off the oven.

AFTER USE

- Turn back the Timer to OFF.
- Turn the Heating Selector Dial to OFF.
- Turn the Rotisserie & Convection Dial to OFF.
- Unplug the appliance from the outlet.
- Wait until the oven is completely cool before any cleaning or maintenance.

MAINTENANCE AND CLEANING

- Unplug the appliance and allow it to cool before cleaning.
- Do not immerse the appliance in water. All surfaces can be cleaned with a clean damp cloth.
- If stains still appear, it is recommended to use soap.
- Do not use abrasive cleaners or sharp utensils to clean the appliance.
- Clean the interior chamber with a clean damp cloth.

Due to the constant development of product functions and designs, we reserve the right to make changes to the product without prior notice.

كــــراون
لايــــن

فرن كهربائي سعة 100 لتر
مع شواية دوارة وحمل حراري ولمبة

كتيب تعليمات التشغيل

موديل رقم: EO-439

220-240 فولت 60/50 هرتز 2800 واط

يرجى قراءة هذه الإرشادات والاحتفاظ بها للرجوع اليها في المستقبل

إجراءات السلامة المهمة

عند استخدام الأجهزة الكهربائية، يجب دائما اتباع الاحتياطات الأساسية التي تشمل ما يلي:
1. يجب قراءة جميع التعليمات قبل الاستخدام أو التنظيف.
2. ضرورة القيام بالإشراف عند استخدام أي جهاز بالقرب من الأطفال.
3. عدم غمر السلك أو القابس أو أي جزء من الجهاز في الماء أو أي سوائل أخرى.
4. عدم ترك السلك يتدلى على حافة الطاولة أو المنضدة أو ملامسة الأسطح الساخنة.
5. يجب عدم تشغيل الجهاز بسلك أو قابس تالف أو بعد تعطله أو تعرضه للتلف بأي شكل من الأشكال. وفي حال تلف أو كسر الجهاز ، يجب على المستخدم عدم إصلاحه بنفسه. أما في حالة كسر سلك التيار الكهربائي أو القابس، يجب على المستخدم عدم إصلاحه أو تغييره بنفسه بل يجب إرساله إلى مركز خدمة مؤهل للإصلاح أو الصيانة.
6. عند تشغيل الفرن، يجب ترك مسافة لا تقل عن عشرة سنتيمترات (أربع بوصات) على جميع جوانبه للسماح بتدوير هواء كاف.
7. لفصل الجهاز، يجب تدوير جهاز التحكم إلى وضع الإيقاف قبل فصل القابس.
8. يجب فصل الجهاز عن المقبس عند عدم استخدامه وقبل التنظيف والإمساك دائما بالقابس وعدم سحب السلك على الاطلاق.
9. يجب ترك الجهاز يبرد قبل تركيب أو إزالة أجزائه وقبل التنظيف.
١٠. يجب توخي الحذر الشديد عند نقل أي جهاز يحتوي على زيت ساخن أو طعام ساخن.
١١. يجب عدم تغطية أي جزء من الفرن بمعدن أو قطعة قماش الامر الذي يمكن أن يؤدي إلى ارتفاع درجة حرارة الفرن.
١٢. يجب عدم وضع أي شيء على الفرن أو تغطيته.
١٣. يجب توخي الحذر الشديد عند إزالة الصينية أو التخلص من الشحوم الساخنة أو السوائل الساخنة الأخرى.
١٤. يجب عدم ترك الجهاز أثناء التشغيل من دون مراقبة.
١٥. لا يجوز وضع الأطعمة أو الأواني المعدنية كبيرة الحجم داخل الفرن الامر الذي يمكن أن يؤدي إلى إندلاع حريق أو خطر التعرض لصدمة كهربائية.
١٦. يجب توخي الحذر الشديد عند استخدام الحاويات المصنوعة من أي شيء غير المعدن أو السيراميك المعتمد.
١٧. يجب عدم وضع أي من المواد التالية في الفرن: البلاستيك أو الورق أو أي شيء مشابه.
١٨. عدم إستخدام أي ملحقات غير الملحقات الموصى بها من قِبل الشركة المصنعة في هذا الفرن.
١٩. يجب دائما إرتداء قفازات فرن واقية ومعزولة عند إدخال أو إخراج أي أغراض من الفرن الساخن.
20. يجب عدم إستخدام هذا الفرن لأي غرض غير الغرض المخصص له.
٢١. هذا الفرن للاستخدام المنزلي فقط.

٢٢. يعتبر الباب الزجاجي ثقيلا ولذلك يرجى الإمساك بالمقبض حتى ينفتح الباب تماما وعدم ترك الباب يسقط من تلقاء نفسه.

٢٣. يجب مراقبة الأطفال للتأكد من عدم العبث بالجهاز.

٢٤. هذا الفرن غير مخصص للاستخدام من قِبل الأشخاص ذوي القدرات البدنية أو الحسية أو العقلية المحدودة، أو عديمي الخبرة والمعرفة، إلا إذا تم الإشراف عليهم بشكل كافٍ أو تزويدهم بإرشادات كافية بشأن استخدام الفرن من شخص مسؤول عن سلامتهم.

٢٥. في حالة تلف سلك التيار الكهربائي، يجب استبداله من خلال الشركة المصنعة أو خدمة ما بعد البيع أو أشخاص مؤهلين بشكل مماثل لتجنب أي مخاطر.
26. 26. قد تكون درجة حرارة الأسطح التي يمكن الوصول إليها مرتفعة عند تشغيل الجهاز.
٢٧. عدم السماح بتشغيل هذا الفرن من خلال مؤقت خارجي أو جهاز تحكم عن بُعد منفصل.

الملحقات:
* صينية خبز
* رف خبز
* مقبض صينية
* طقم سيخ دوار
* قفاز

قائمة العناصر المكونة
1. مؤشر الفرن
2. المؤقت
3. قرص التسخين
4. قرص درجة الحرارة
5. قرص الشواية والحمل الحراري
6. قرص المصباح الداخلي
7. مقبض الباب
8. رف سلكي
9. صينية خبز
10. شوك الشواية
11. مقبض الشواية
12. مقبض الصينية

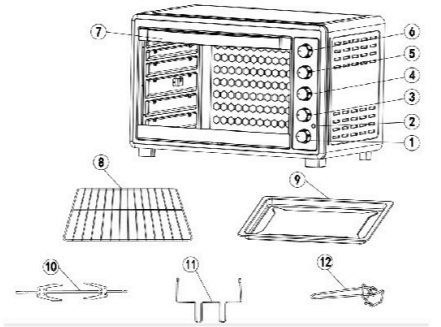

قرص الشواية والحمل الحراري
1. إيقاف
2. الحمل الحراري
3. الشواية
4. الشواية والحمل الحراري



قرص درجة الحرارة
تدوير مفتاح الاختيار باتجاه عقارب الساعة
إلى الوضع الصحيح بين 100 درجة مئوية
و250 درجة مئويةثم ضبط درجة
حرارة التحميص

قرص اختيار التسخين
1. إيقاف
2. تسخين علوي
3. تسخين سفلي
4. تسخين علوي وسفلي

قرص المؤقت (اللمبة الداخلية)
عند تشغيل المؤقت، تضئ اللمبة الداخلية.
عند إطفاء المؤقت، تطفئ اللمبة الداخلية.

قبل الاستخدام
- يجب التأكد من وجود تهوية كافية حول الفرن.
- يجب التأكد من جفاف الفرن تماما قبل الاستخدام.
- عدم وضع الفرن على سطح خشبي غير معالج بل يجب وضعه على سطح مقاوم للحرارة.
- يمكن أن تترك أقدام الفرن بعض العلامات على الطاولة، وفي حالة حدوث ذلك، يجب إزالة العلامات بقطعة قماش مبللة.

استخدام الفرن
- تدوير قرص الترموستات باتجاه عقارب الساعة إلى درجة الحرارة المطلوبة.
- تدوير قرص اختيار الشواية/الحمل الحراري إلى الوضع المطلوب.
- تدوير قرص اختيار التسخين إلى الوضع المطلوب.
- تدوير قرص المؤقت باتجاه عقارب الساعة إلى وقت الطهي المطلوب.
- تضئ لمبة التيار الكهربائي بعد تشغيل المؤقت، وتنطفئ عند إيقافها.
- عند انتهاء وقت الطهي، يتوقف المؤقت تلقائيا ويرن الجرس.
- إذا انتهى الطهي قبل وقت الطهي المحدد، يجب إعادة المؤقت إلى وضع الإيقاف لإيقاف تشغيل الفرن.

- عند أول استخدام لهذا الفرن، قد يتصاعد بعض الدخان الخفيف منه، وهذا أمر طبيعي. سيختفي الدخان بعد 5-10 دقائق.
- للحصول على أداء طهي أفضل، يوصى بتسخين الفرن مسبقا لمدة 10-15 دقيقة تقريبا.

استخدامات أسياخ الشواء
- إدخال قطعة سيخ واحدة في الطرف المدبب للسيخ، مع التأكد من أن رؤوس السيخ متجهة نحو الطرف المدبب. تحريك السيخ نحو الطرف المربع للسيخ.
- إدخال السيخ مباشرة في منتصف الطعام المراد تحميصه.
- إدخال السيخ الآخر في الطرف المدبب للسيخ، مع التأكد من أن رؤوس السيخ متجهة نحو الطرف المربع للسيخ.
- وضع قطعتين سيخ في الطعام، ثم تثبيتهما بمسامير الإبهام.
- التأكد من أن الطعام متمركز على السيخ.
- إدخال الطرف المدبب للسيخ في مقبس التشغيل، مع التأكد من أن الطرف المربع للسيخ مستقر على دعامة السيخ.
- فصل التيار الكهربائي عن الفرن.
- ضبط منظم الحرارة على ٢٥٠ درجة مئوية.
- تدوير المؤقت إلى الوقت المطلوب، وتضئ مؤشر التيار الكهربائي. وعادةً ما يستغرق تحميص دجاجة وزنها 2,5 كجم (٥,٥ رطل) ٣٠ دقيقة.
- ضبط محدد درجة الحرارة على وضعية الشواء أو الشواء والحمل الحراري، وستبدأ الشواية بالدوران.
- عند انتهاء الشواء، يجب ضبط المؤقت إلى وضع الإيقاف.
- بعد أن يبرد الفرن، يجب وضع خطافات مقبض الشواية تحت الأخاديد على جانبي السيخ. يجب رفع الجانب الأيمن من السيخ أولا، ثم تحريكه قليلًا نحو الجانب الأيمن، بحيث يخرج الجانب الأيسر من السيخ من مقبس التشغيل. ثم إخراج الطعام المشوي من الفرن بحرص.
- إخراج الطعام من السيخ.

الطهي على الشواية
- يجب ترك الباب مفتوحا.
- تدوير مفتاح التشغيل إلى وضع الشواء (التسخين العلوي)، ويوصى باستخدام الحمل الحراري.
- تدوير قرص درجة الحرارة إلى ٢٥٠ درجة مئوية.
- تدوير المؤقت إلى وقت الشواء المطلوب.
- عند انتهاء الطهي على الشواية، يجب ضبط المؤقت إلى وضع الإيقاف لإيقاف تشغيل الفرن.

بعد الاستخدام
- ضبط المؤقت إلى وضع الإيقاف.
- تدوير قرص اختيار التسخين إلى وضع الإيقاف.
- تدوير قرص الشواية والحمل الحراري إلى وضع الإيقاف.
- فصل الجهاز عن المقبس.
- الإنتظار حتى يبرد الفرن تماما قبل أي تنظيف أو صيانة.

الصيانة والتنظيف
- فصل الفرن عن التيار الكهربائي وتركه يبرد قبل التنظيف.
- عدم غمر الفرن في الماء. يمكن تنظيف جميع الأسطح بقطعة قماش نظيفة ورطبة.
- في حال استمرار ظهور البقع، يوصى باستخدام الصابون.
- عدم إستخدام منظفات كاشطة أو أدوات حادة لتنظيف الفرن.

- تنظيف الحجرة الداخلية بقطعة قماش نظيفة ورطبة.

نظرا للتطوير المستمر لوظائف المنتج وتصميماته، نحتفظ بالحق في إجراء تغييرات على المنتج من دون إشعار مسبق.